

Additional info from Terry Stotyn, Cratus Canada
<tstotyn@cratuscanada.com>:

Q - LED warning lights mentioned in the instructions, what's up with that?

A: Yes, they're inside and shine through the front of the unit.

Q - Details of how wires can exit the Sine Tamer enclosure.

A: They can come out the sides, top or bottom.

Q - Position of unit for installation.

A: Not a problem, install front forward.

Q - Does it emanate heat?

A: No, it draws no power.

Q - Any air space needed around or behind unit?

A: No.

Q - What's up with attaching this to a breaker as mentioned? Why do that?

A: Because it's a good option in case of doing alterations; this adds quick cut-off capability. It saves having to enter the panel to detach the conductors from the busbars (as with industrial/commercial applications). Black leads attach directly to a 2-pole breaker, which could be a 15 Amp or other type; provided all precise install instructions are followed such as very trim conductor lengths and no sharp wire turns, etc., installation is easy.

Q - If there's a surge protector already in the system, do we leave this or remove it?

A: Remove this, because

a) it is likely fried already because it generally takes only one or two hits from surges, which generally murders these devices, and

b) it may do something unhelpful (and unspecified) to diminish results somehow.